


INSTALLATIE - EN GEBRUIKSHANDLEIDING - INSTRUCTIONS D' INSTALLATION ET D' UTILISATION
 INSTALLATIONS- UND BEDIENUNGSANLEITUNG - INSTALLATION AND APPLICATION INSTRUCTIONS



OPGELET	Stroom uitschakelen voor onderhoud
ATTENTION	Débranchez l'alimentation avant de toute intervention sur le produit
ACHTUNG	Schalten Sie die Stromversorgung vor der Wartung
ATTENTION	Disconnect power before servicing

1	Isometrisch aanzicht - Vue isométrique Isometrische Ansicht - Isometric view
2	Afmetingen - Dimensions Abmessungen - Dimensions
3	Kabelingang - Entrée câbles Kabeldurchführung - Cable entry
4	Montage - Montage Befestigung - Mounting

LT PB500 12/ 24 Vac/dc
LT PB500 PNP 12/ 24 Vdc

MT PB500 40/ 80 Vac/dc
HT PB500 120/ 240 Vac

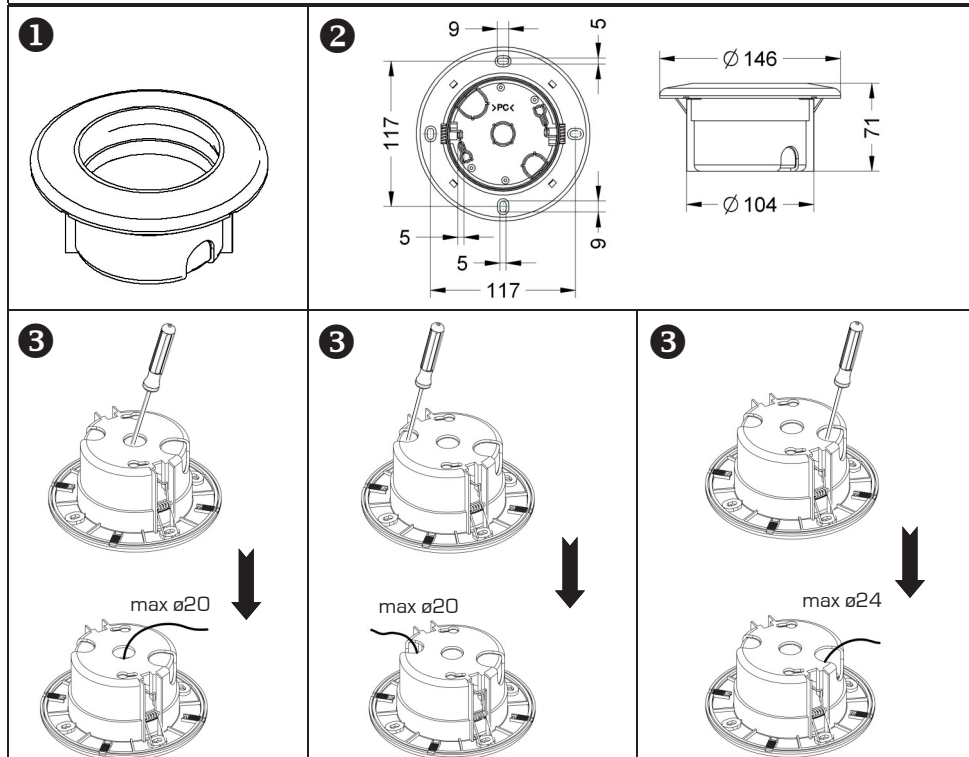

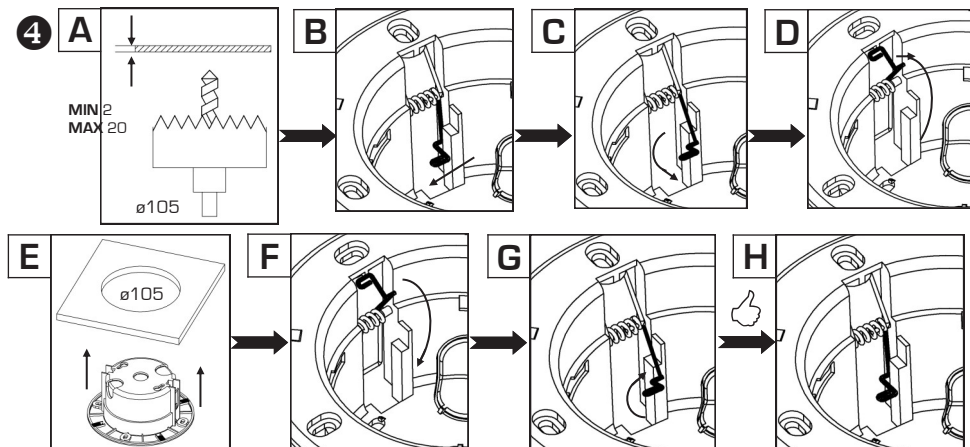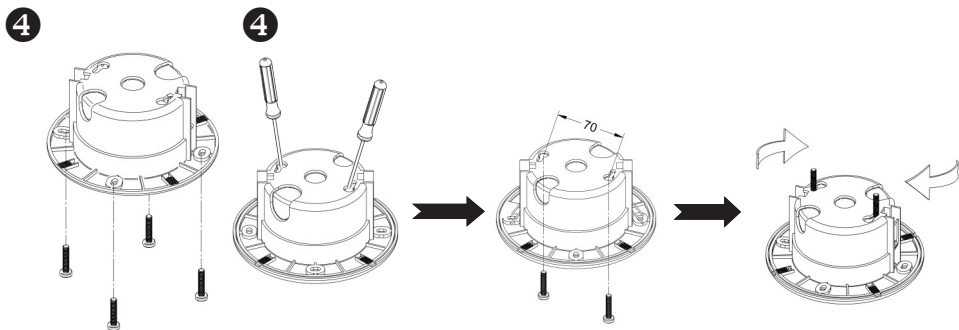

SAMENSTELLING - COMPOSITIONS - GESTALTUNGEN - COMPOSITIONS

