

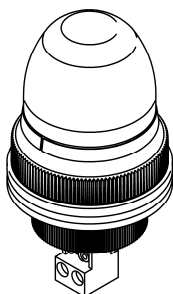


- ISTRUZIONI DI INSTALLAZIONE E UTILIZZO - INSTALLATION AND APPLICATION INSTRUCTIONS -
 - INSTRUCTIONS D' INSTALLATION ET D' UTILISATION - INSTALLATIONS- UND BEDIENTUNGSANLEITUNG -
 - INSTRUCCIONES DE INSTALACIÓN Y EMPLEO -

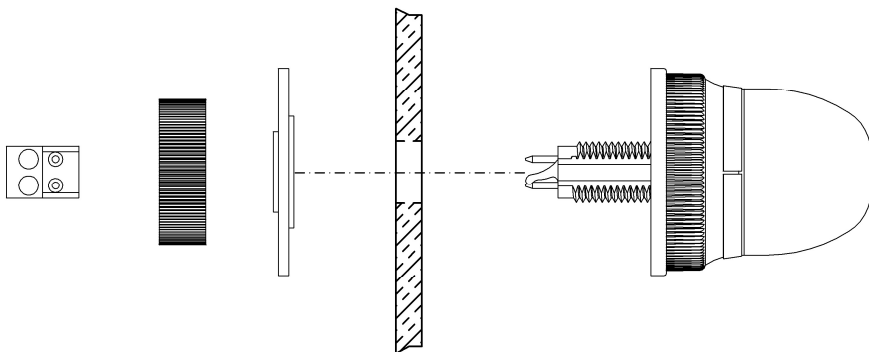

MINIOVO F
MINIOVO L

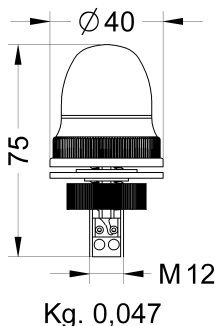

MINIOVO F

VDC	24	—	—
VAC		110	240
mA	55	60	45

MINIOVO L

VDC	24	—	—
VAC		110	240
mA	55	60	45
Flash/min. 150 ± 20			

L' INSTALLAZIONE DEVE ESSERE EFFETTUATA DA PERSONALE SPECIALIZZATO - INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL
 L' INSTALLATION DOIT ETRE EFFECTUEE PAR UN PERSONNEL SPECIALISE - DIE INSTALLATION IST VON EINER FACHKRAFT VORZUNEHMEN
 LA INSTALACIÓN DEBERÁ REALIZARSE POR PERSONAL ESPECIALIZADO

