




INSTALLATIONS- UND BEDIENUNGSANLEITUNG -
INSTALLATION AND APPLICATION INSTRUCTIONS - INSTRUCTIONS D' INSTALLATION ET D' UTILISATION -
INSTRUCCIONES DE INSTALACIÓN Y EMPLEO - ISTRUZIONI DI INSTALLAZIONE E UTILIZZO

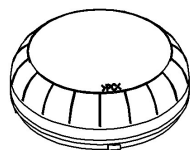


MWL 8951
MWL 8952
MWL 8953
MWL 8954
MML 8963
MML 8964

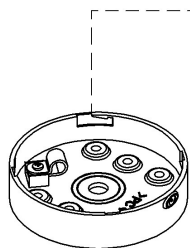


BMF 8911
BMF 8991

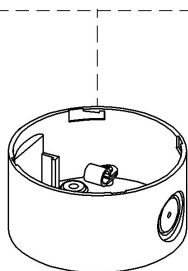


BMT 8912
BMT 8992
BMT 8914
BMT 8994

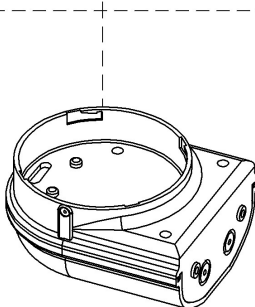



BMW 8913
BMW 8915

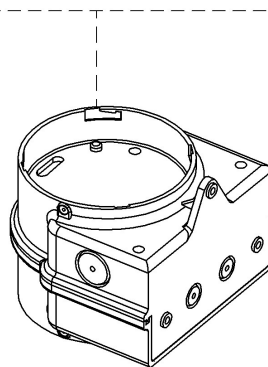



BDW 8916
BDW 8917

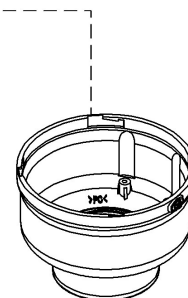


BME 8993
BME 8995

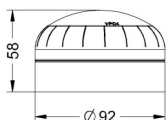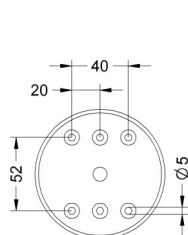




MWL 895X + BMF 8911
MWL 895X + BMF 8991
MML 896X + BMF 8911
MML 896X + BMF 8991

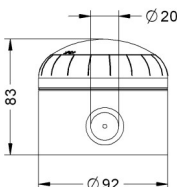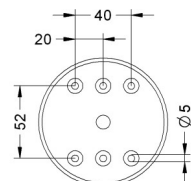


MWL 895X + BMT 891X
MWL 895X + BMT 899X
MML 896X + BMT 891X
MML 896X + BMT 899X

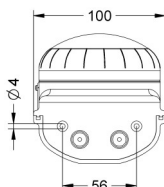


MWL 895X + BMW 891X
MML 896X + BMW 891X

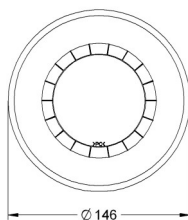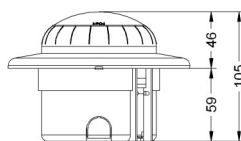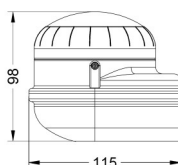

MWL 895X + BME 899X
MML 896X + BME 899X

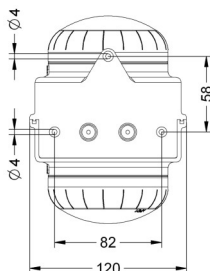

MWL 895X + BDW 891X
MML 896X + BDW 891X

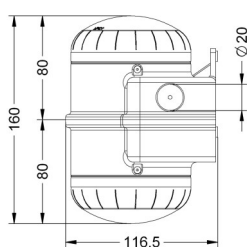

V_{DC}	12÷24	
V_{AC}	12÷24	
mA	250	155


V_{AC}	90÷240	
mA	100	75

ACHTUNG	Vor Öffnen des Gerätes dieses spannungsfrei schalten
WARNING	Disconnected power supply before making any intervention on the device
ATTENTION	S'assurer d'avoir coupé l'alimentation avant d'intervenir sur le produit.
ADVERTENCIA	Desconectar la tensión eléctrica antes de trabajar en el equipo
ATTENZIONE	Assicurarsi di togliere tensione prima di intervenire sul prodotto


SCHUTZSICHERUNG	Für die Zuleitung träge Sicherungen verwenden, die nach der Spannung zu bemessen sind
FUSE WIRE PROTECTION	On the power supply line the rating of the supply fuse must be according to the voltage
FUSIBLE DE PROTECTION	Sur la ligne d'alimentation utiliser des fusibles retardés dimensionnés selon la tension
FUSIBLE DE PROTECCIÓN	En la línea de alimentación emplear fusibles de seguridad adecuados al voltaje
FUSIBILE DI PROTEZIONE	Sulla linea di alimentazione utilizzare fusibili ritardati dimensionati a seconda della tensione

FUNCTIONS (MWL 895X): Blinkt/ flashing / clignotement/ destello / Lampeggio
 COLORS (MML 896X): Farbe / color / couleur / color / Colore

LICHTINTENSITÄT / LIGHT INTENSITY / INTENSITÉ LUMINEUSE /
 INTENSIDAD LUMINOSA / INTENSITA' LUMINOSA

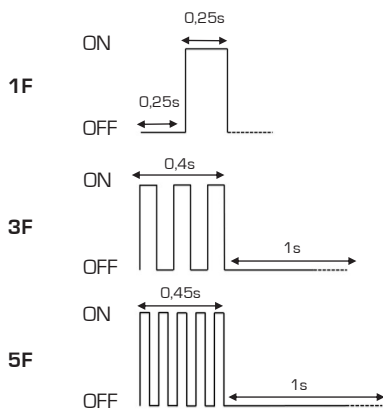

FUNCTIONS	COLORS (RGB)
Dauerlicht / Steady light / Lumière fixe / Luz fija / Luce fissa	Rot / red / rouge / rojo / rosso
	Grün / green / vert / verde / verde
1 Flash	Blau / blue / bleu / azul / blu
3 Flash	Amber / amber / orange / ámbra / ambra
5 Flash	Violett / violet / violet / violeta / viola
Random	Gelb / yellow / jaune / amarillo / giallo
	Cyan / cyan / cyan / cian / ciano
	Weiß / white / blanc / blanco / bianco

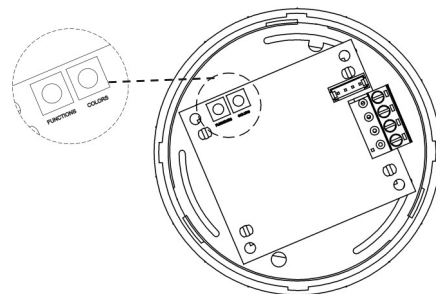

PROGRAMMIERUNG - PROGRAMMING - PROGRAMATION - PROGRAMACIÓN - PROGRAMMAZIONE








- Den gewünschten Pole mit Strom verbinden - Supply power to the chosen pole - Alimenter la voie choisie - Conectar el polo elegido - Alimentare il canale desiderato
- FUNCTIONS drücken, um Blinkt auszuwählen - Select the flashing mode pushing FUNCTIONS - Sélectionner le type de clignotement en appuyant FUNCTIONS - Para seleccionar el tipo de destello apretar FUNCTIONS - Scegliere il tipo di lampeggio premendo FUNCTIONS
- COLORS drücken, um Farbe auszuwählen - Select the color pushing COLORS - Sélectionner la couleur en appuyant COLORS - Para seleccionar el color apretar COLORS - Scegliere il colore desiderato premendo COLORS
- Bei Strom Anhaltung, werden beide Blinkt und Farbe gespeichert werden - Disconnecting power, both color and flashing mode will be recorded - Débranchant l'alimentation, soit la couleur soit le clignotement seront mémorisés - Desconectando el polo, sea el color sea el destello quedan en memoria - Togliendo tensione il colore e il lampeggio saranno memorizzati






VERKABELUNG / WIRING / CÂBLAGE / CABLEADO / CABLAGGIO BASES LT (12÷24V DC/AC)

MWL 895X + BMF 8911 / MWL 895X + BMF 8991 / MWL 895X + BMT 8912 / MWL 895X + BMT 8992 / MWL 895X + BMW 8913 MWL 895X + BDW 8916 / MWL 895X + BME 8993 / MML 896X + BMF 8911 / MML 896X + BMF 8991 / MML 896X + BMT 8912 MML 896X + BMT 8992 / MML 896X + BMW 8913 / MML 896X + BDW 8916 / MML 896X + BME 8993				12÷24V DC/AC	
①	②	MWL 895X C + 1: Dauerlicht / Steady light / Lumière fixe / Luz fija / Luce fissa C + 2: Blinklicht (1F) / Intermittent light (1F) / Lumière clignotante (1F) / Luz intermitente (1F) / Luce lampeggiante (1F) C + 3: Blinklicht (5F) / Flashing light (5F) / Lumière à éclats (5F) / Luz de destellos (5F) / Luce Flash (5F)	MML 896X C + 1: Licht grün (Dauerlicht) / Green light (Steady) / Lumière vert (Fixe) / Luz verde (Fija) / Luce verde (Fissa) C + 2: Licht amber (1F) / Amber light (1F) / Lumière orange (1F) / Luz ámbra (1F) / Luce ambra (1F) C + 3: Licht rot (5F) / Red light (5F) / Lumière rouge (5F) / Luz roja (5F) / Luce rossa (5F)	 C + 2 hat die Priorität auf C + 1 C + 2 has priority over C + 1 C + 2 est prioritaire sur C + 1 C + 2 tiene prioridad en C + 1 C + 2 ha priorità su C + 1 C + 3 hat die Priorität auf C + 2 und C + 1 C + 3 has priority over C + 2 and C + 1 C + 3 est prioritaire sur C + 2 et C + 1 C + 3 tiene prioridad en C + 2 y C + 1 C + 3 ha priorità su C + 2 e C + 1	
③	④				












VERKABELUNG / WIRING / CÂBLAGE / CABLEADO / CABLAGGIO BASES HT (90÷240V AC)

MWL 895X + BMT 8914 / MWL 895X + BMT 8994 / MML 896X + BMT 8914 / MML 896X + BMT 8994		90÷240V AC	
①	②	③	
④	MWL 895X C + 1: Dauerlicht / Steady light / Lumière fixe / Luz fija / Luce fissa C + 2: Blinklicht (1F) / Intermittent light (1F) / Lumière clignotante (1F) / Luz intermitente (1F) / Luce lampeggiante (1F) C + 3: Blinklicht (5F) / Flashing light (5F) / Lumière à éclats (5F) / Luz de destellos (5F) / Luce Flash (5F)	MML 896X C + 1: Licht grün (Dauerlicht) / Green light (Steady) / Lumière vert (Fixe) / Luz verde (Fija) / Luce verde (Fissa) C + 2: Licht amber (1F) / Amber light (1F) / Lumière orange (1F) / Luz ámbra (1F) / Luce ambra (1F) C + 3: Licht rot (5F) / Red light (5F) / Lumière rouge (5F) / Luz roja (5F) / Luce rossa (5F)	
		C + 2 hat die Priorität auf C + 1 C + 2 has priority over C + 1 C + 2 est prioritaire sur C + 1 C + 2 tiene prioridad en C + 1 C + 2 ha priorità su C + 1 C + 3 hat die Priorität auf C + 2 und C + 1 C + 3 has priority over C + 2 and C + 1 C + 3 est prioritaire sur C + 2 et C + 1 C + 3 tiene prioridad en C + 2 y C + 1 C + 3 ha priorità su C + 2 e C + 1	

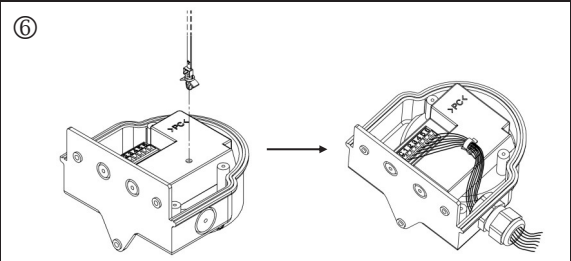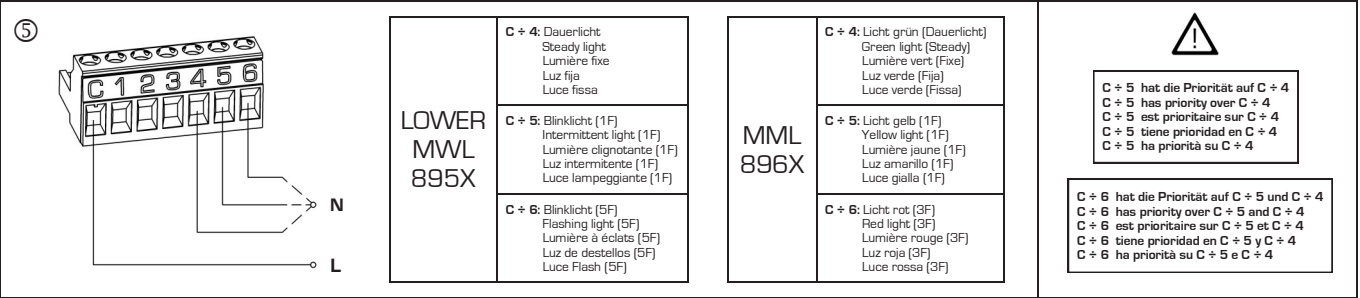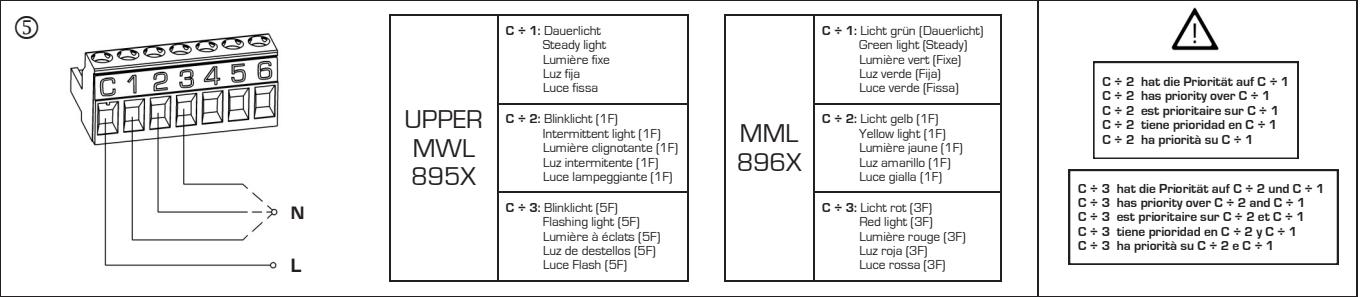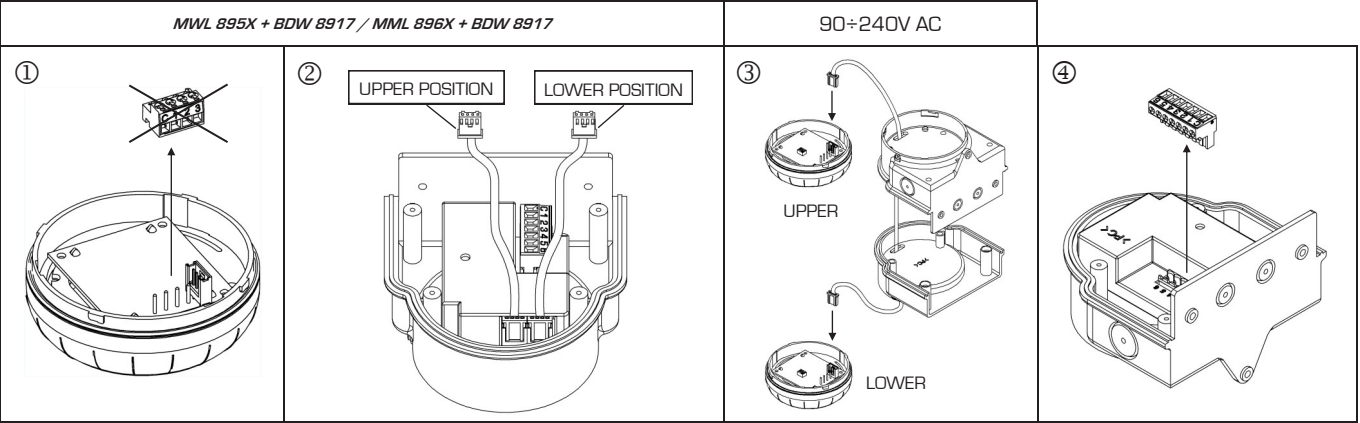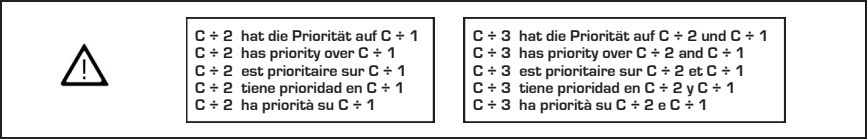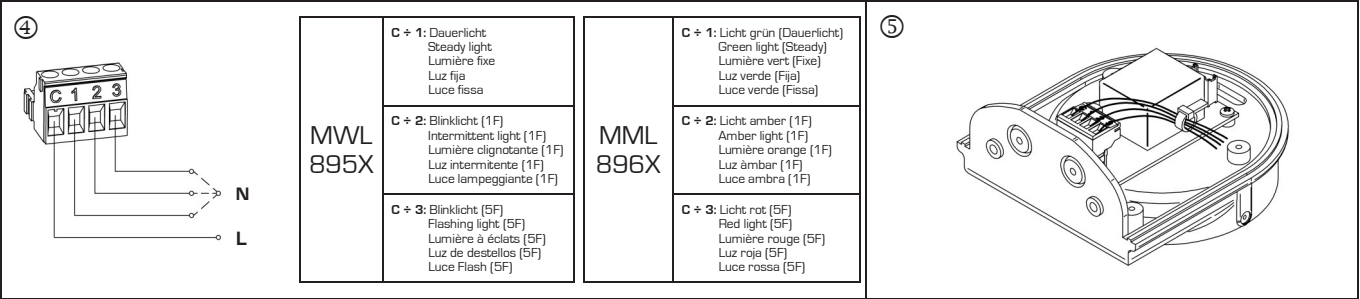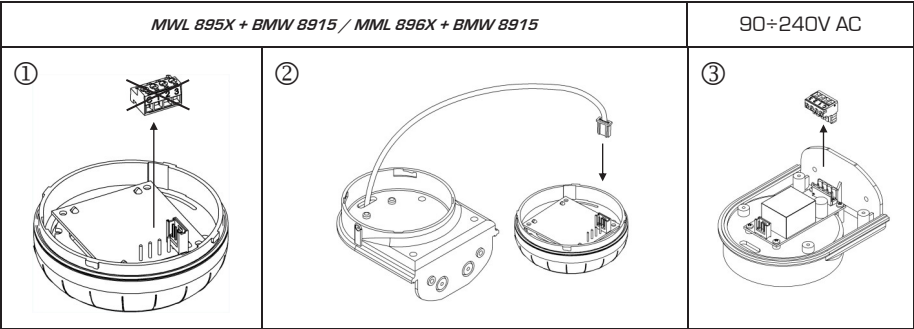

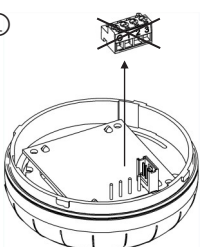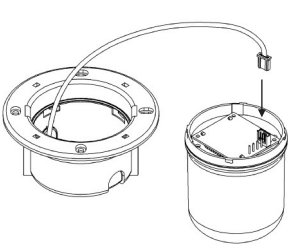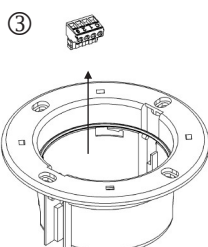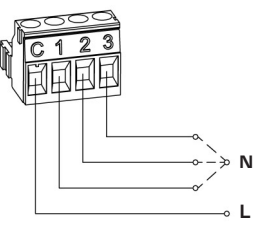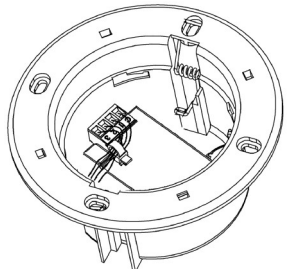MWL 895X + BME 8995 / MML 896X + BME 8995			90÷240V AC		
① 	② 	③ 			
④ 	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; vertical-align: top; padding: 5px;"> MWL 895X C + 1: Dauerlicht Steady light Lumière fixe Luz fija Luce fissa C + 2: Blinklicht (1F) Intermittent light (1F) Lumière clignotante (1F) Luz intermitente (1F) Luce lampeggiante (1F) C + 3: Blinklicht (5F) Flashing light (5F) Lumière à éclats (5F) Luz de destellos (5F) Luce Flash (5F) </td> <td style="width: 50%; vertical-align: top; padding: 5px;"> MML 896X C + 1: Licht grün (Dauerlicht) Green light (Steady) Lumière vert (Fixe) Luz verde (Fija) Luce verde (Fissa) C + 2: Licht amber (1F) Amber light (1F) Lumière orange (1F) Luz àmber (1F) Luce ambra (1F) C + 3: Licht rot (5F) Red light (5F) Lumière rouge (5F) Luz roja (5F) Luce rossa (5F) </td> </tr> </table>		MWL 895X C + 1: Dauerlicht Steady light Lumière fixe Luz fija Luce fissa C + 2: Blinklicht (1F) Intermittent light (1F) Lumière clignotante (1F) Luz intermitente (1F) Luce lampeggiante (1F) C + 3: Blinklicht (5F) Flashing light (5F) Lumière à éclats (5F) Luz de destellos (5F) Luce Flash (5F)	MML 896X C + 1: Licht grün (Dauerlicht) Green light (Steady) Lumière vert (Fixe) Luz verde (Fija) Luce verde (Fissa) C + 2: Licht amber (1F) Amber light (1F) Lumière orange (1F) Luz àmber (1F) Luce ambra (1F) C + 3: Licht rot (5F) Red light (5F) Lumière rouge (5F) Luz roja (5F) Luce rossa (5F)	⑤ 
MWL 895X C + 1: Dauerlicht Steady light Lumière fixe Luz fija Luce fissa C + 2: Blinklicht (1F) Intermittent light (1F) Lumière clignotante (1F) Luz intermitente (1F) Luce lampeggiante (1F) C + 3: Blinklicht (5F) Flashing light (5F) Lumière à éclats (5F) Luz de destellos (5F) Luce Flash (5F)	MML 896X C + 1: Licht grün (Dauerlicht) Green light (Steady) Lumière vert (Fixe) Luz verde (Fija) Luce verde (Fissa) C + 2: Licht amber (1F) Amber light (1F) Lumière orange (1F) Luz àmber (1F) Luce ambra (1F) C + 3: Licht rot (5F) Red light (5F) Lumière rouge (5F) Luz roja (5F) Luce rossa (5F)				
⚠ C + 2 hat die Priorität auf C + 1 C + 2 has priority over C + 1 C + 2 est prioritaire sur C + 1 C + 2 tiene prioridad en C + 1 C + 2 ha priorità su C + 1 C + 3 hat die Priorität auf C + 2 und C + 1 C + 3 has priority over C + 2 and C + 1 C + 3 est prioritaire sur C + 2 et C + 1 C + 3 tiene prioridad en C + 2 y C + 1 C + 3 ha priorità su C + 2 e C + 1					

ANZIEHEN DER HAUBE/ DOME TIGHTENING/ SERRAGE DU DÔME/ APRIETE DE LA CÚPULA/ BLOCCAGGIO CUPOLE

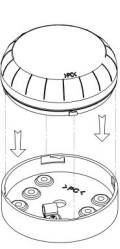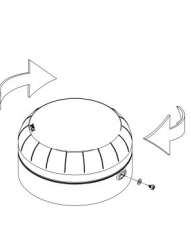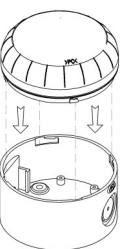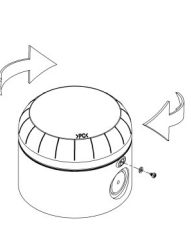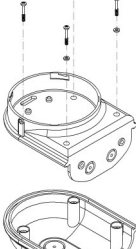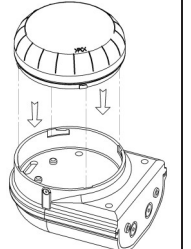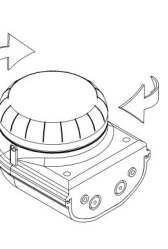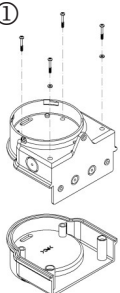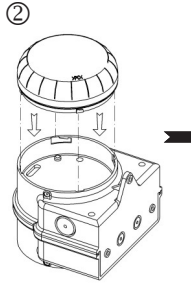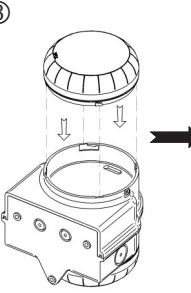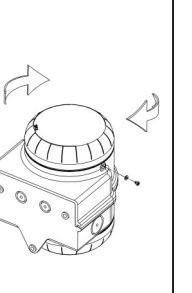① 	② 	① 		② 			
MWL 895X + BMF 8911 / MWL 895X + BMF 8991 MML 896X + BMF 8911 / MML 896X + BMF 8991		MWL 895X + BMT 891X / MWL 895X + BMT 899X MML 896X + BMT 891X / MML 896X + BMT 899X		① 		② 	③ 
MWL 895X + BMW 891X / MML 896X + BMW 891X							
① 	② 	③ 	④ 			⑤ 	
MWL 895X + BME 899X / MML 896X + BME 899X							

- DIE INSTALLATION IST VON EINER ELEKTRO- FACHKRAFT VORZUNEHMEN - INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL -
 - L' INSTALLATION DOIT ETRE EFFECTUEE PAR UN PERSONNEL SPECIALISE - LA INSTALACIÓN DEBERÁ REALIZARSE POR PERSONAL ESPECIALIZADO -
 - L' INSTALLAZIONE DEVE ESSERE EFFETTUATA DA PERSONALE SPECIALIZZATO -